



MANUAL

ADJUSTABLE MAG LATCH

COMPATIBILITY

- MDT ACC Elite Chassis
- MDT ACC Premier GEN2 Chassis
- MDT Precision Bottom Metal

SUPPORT

support@mdttac.com

+1 (604) 393-0800




Insert spring with the loop toward the top. Insert dowel pin to hold the spring in place. The dowel pin should be flush on each side.



INSTALL NEW LATCH



With the latch in position, apply pressure to the spring so that the dowel pin is aligned with the hole. Push the latch pin into the hole then use a mallet to tap it fully into place, pushing the dowel pin out the other side.

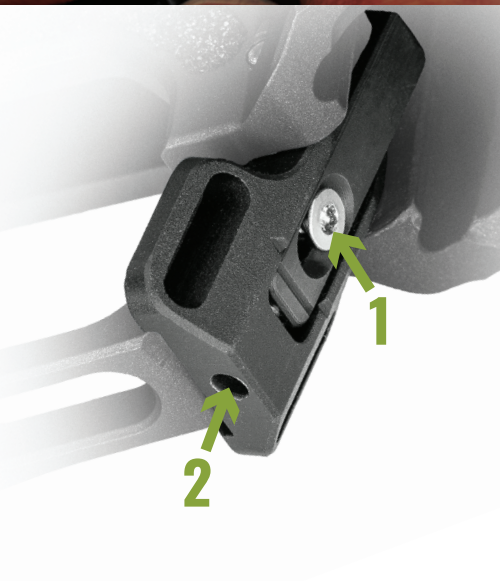

HEIGHT ADJUSTMENTS



Loosen the front screw (1) with a T10. Insert a magazine and adjust the latch tip height with the bottom screw (2), when the magazine can latch and has a little bit of up/down movement, remove the magazine and tighten the front screw to 10 in-lbs.