

**HAVE QUESTIONS OR
NEED ADDITIONAL SUPPORT?**

 
support@mdttac.com
+1 (604) 393-0800

TOOLS REQUIRED


- 2mm Hex Drive

INSTALL ON PICATINNY RAIL

1. Press and hold the button at the top of the bipod head to depress the picatinny rail spring clamp.

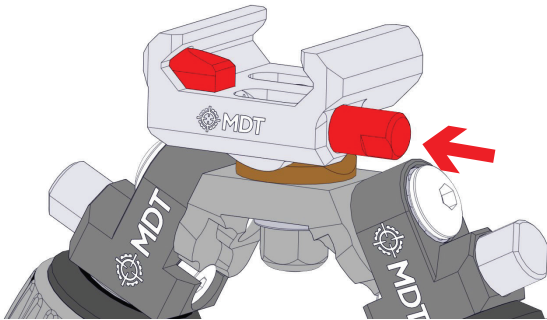

 2. Slide the bipod onto the picatinny rail from the front or rear. The bipod head pans 360° so the MDT logo on the picatinny clamp should be facing (forwards/rearwards).
3. Release the clamp when in the desired location. The clamp hardware on the opposite side should be flush with the head of the bipod when the clamp is fully engaged.

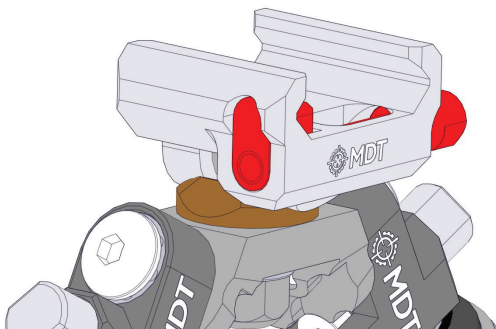

4. Tug the bipod forward and back to ensure it is seated correctly and will not move.

 
BIPOD FEET

1. To replace or reposition the bipod feet, use a 2mm hex drive to loosen the clamping screw. Remove and then replace the feet in desired position and tighten the screw until hand tight.

***CAUTION:** Overtightening screws can damage the product and/or cause it to malfunction.

LEG OPERATION

1. To deploy the legs, push and hold the button at the top of the leg and swing to the 45° or 90° position. Release the button to lock the leg in that position. Reverse to stow legs.

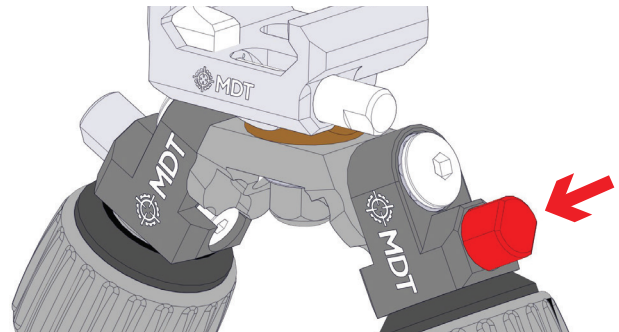

2. To extend the legs, grab the leg locking collar and twist counter-clockwise to unlock. Slide the leg down or up, then twist the collar clockwise to lock the leg into position.

CANT TENSION ADJUSTMENT

1. To adjust cant tension, use a 8mm socket and rotate the nut on the underside of the bipod head to either loosen or tighten.

