

M-LOK THUMB REST **INSTALL**

Install onto any M-LOK slot. Loosen the screw with a 1/8" hex key to rotate and move the thumb rest into your desired position.

1/8
IN

MAGAZINE LATCH **ADJUSTMENTS**

Loosen the front screw (1) with a T10. Insert a magazine and adjust the latch tip height with the bottom screw (2), when the magazine can latch and has a little bit of up/down movement, remove the magazine and tighten the front screw.

T10


GRIP TAPE **INSTALL**

For increased grip and tactile awareness optional grip tape is included. Align the bottom tape with the forward-most M-LOK slot. Align the trigger-guard tape with the rounded corner.

MAGAZINE DOWEL **INSTALL**

To reduce side to side movement of the magazine, and to increase feeding reliability for undersized mags, install up to six dowels for a tighter fit.

- 1** Remove the bolt and place the action into the MDT ACC Elite Chassis, ensuring that the trigger and recoil lug are lined up with the corresponding positions in the chassis.

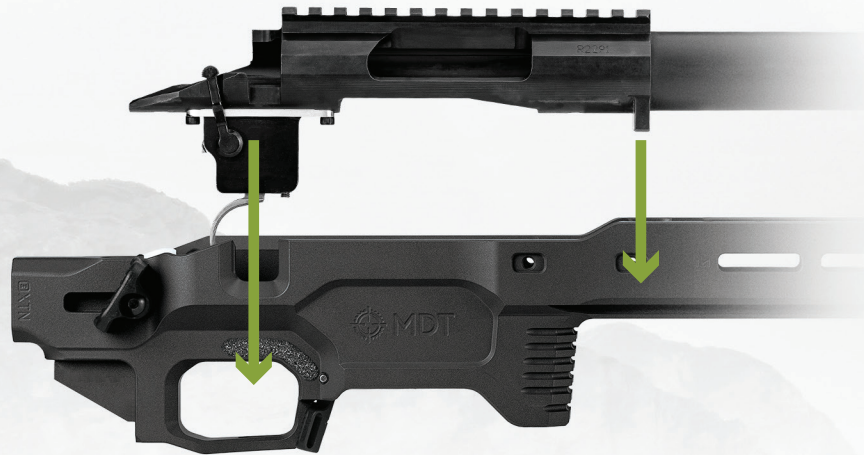

- 2** Apply rearward pressure on the chassis with the barrelled action. While maintaining pressure, tighten the barrelled action in place with the action screws. Then, starting with the front screw, torque both screws to 65 in-lbs.



Action screws should have washers and 3 turns of thread engagement. If they don't have 3 full turns of engagement, you can remove the washers for a tighter fit.

LEARN MORE ABOUT YOUR
MDT ACC ELITE



**SCAN
QR CODE**



GRAB SOME ACCESSORIES AT **MDTTAC.COM**