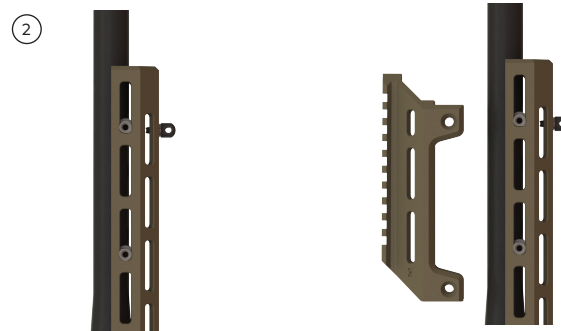


**INSTALLATION**

1. Turn rifle build with barrel pointing upward.  
Slide M-Lok nuts into first and third M-Lok slots in chassis forend on each side from the outside inward.  
Note the orientation of the M-Lok corners.
2. Slide NV Hood onto chassis, aligning the front screw hole with the front M-Lok nut.
3. Tighten the front screws on each side of the chassis until snug, while still loose enough to allow the NV Hood to slide along forend.  
Slide NV Hood forward to line up rear holes with rear M-lok nuts and tighten rear screws until snug.  
Tighten both front and rear action screws to 35 in. lbs.

**Shoot Better.™****MDT**

Modular Driven Technologies Corp.  
Unit 1 - 7949 Venture Place  
Chilliwack, BC, Canada V2R 4H5  
(604) 393-0800

**MDTTAC.COM**